

HEAT ENGINES

EMBRACING

THE THEORY, CONSTRUCTION, AND PERFORMANCE
OF STEAM BOILERS
RECIPROCATING STEAM ENGINES
STEAM TURBINES
AND
INTERNAL COMBUSTION ENGINES

A TEXT-BOOK FOR ENGINEERING STUDENTS

BY

DAVID ALLAN LOW

(WHITWORTH SCHOLAR), M.I. MECH. E.
EMERITUS PROFESSOR OF ENGINEERING, EAST LONDON COLLEGE
(UNIVERSITY OF LONDON)

WITH 656 ILLUSTRATIONS AND 315 EXERCISES

FOURTH IMPRESSION

LONGMANS, GREEN AND CO., LTD.

39 PATERNOSTER ROW, LONDON, E.C.4

NEW YORK, TORONT

BOMBAY, CALCUTTA, AND MADRAS

1926

All rights reserved

BY THE SAME AUTHOR

AN INTRODUCTION TO MACHINE DRAWING
AND DESIGN. With 229 Illustrations and Diagrams.
Crown Svo. 4s.

TEXT-BOOK ON PRACTICAL, SOLID, AND
DESCRIPTIVE GEOMETRY. Crown Svo.
PART I. With 114 Figures. 3s.
PART II. With 64 Figures. 4s.

A MANUAL OF MACHINE DRAWING AND
DESIGN. By DAVID ALLAN LOW and ALFRED WILLIAM
BEVIS. With over 800 Illustrations. Svo. 10s. 6d. net.

APPLIED MECHANICS: Embracing Strength
and Elasticity of Materials, Theory and Design of Struc-
tures, Theory of Machines and Hydraulics. A Text-Book
for Engineering Students. With 850 Illustrations and
780 Exercises. Svo. 12s. 6d. net.

PRACTICAL GEOMETRY AND GRAPHICS.
With over 800 Illustrations and over 700 Exercises.
Svo. 9s. net.

A POCKET-BOOK FOR MECHANICAL ENGI-
NEERS. With over 1000 Illustrations. Fcap. Svo, 740
pages. 9s. net.

LONGMANS, GREEN AND CO., LTD

LONDON, NEW YORK, TORONTO, BOMBAY, CALCUTTA, AND
MADRAS.

207. Mean Effective Pressure from Indicator Diagram.—One of the factors required in determining the work done on the piston of an engine per revolution of the crank shaft, as a step to finding the

indicated horse-power, is the mean effective pressure on the piston. The M.E.P. is the mean height of the indicator diagram measured on the pressure scale of the diagram.

There are various ways of finding the mean height of a diagram. The best way, when a *planimeter* is available, is to measure the *area* of the diagram with that instrument and then dividing the area found by the extreme length of the diagram, measured parallel to the atmospheric line, the result is the mean height, and this multiplied by the number of the pressure scale (units of pressure per unit of length) gives the required M.E.P. For example: if the area of the diagram as found by the planimeter is 1.68 square inches, and if the length of the diagram is 3 inches, then the mean height of the diagram is $1.68 \div 3 = 0.56$ inch, and if the pressure scale is 100 lb. per square inch per inch, then the M.E.P. is $0.56 \times 100 = 56$ lb. per square inch.

The *mid-ordinate method* is the one generally used when a planimeter is not available. This method is illustrated by Fig. 336. The length of the diagram is divided into a number of equal parts, generally 10, and these parts are bisected by ordinates perpendicular to the atmospheric line AL. Applying the pressure scale the lengths of the ordinates lying within the diagram are measured and noted on the diagram as shown; adding these up and dividing by the number of ordinates, in this case 10, the M.E.P. is found.

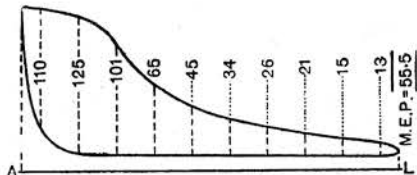


FIG. 336.

Instead of using the pressure scale directly on the separate ordinates, the lengths of these may be marked off in succession and continuously on the straight edge of a strip of paper. The sum of the ordinates is then measured, say, in inches, and the result multiplied by the number of the pressure scale and divided by the number of ordinates gives the M.E.P.

Theoretically the M.E.P. found by means of ordinates will be more accurate the larger the number of ordinates used, but in practice the number need not exceed 20.

If the length of the diagram be divided into as many as 20 equal parts and ordinates be drawn through the points of division and also through the end points there will be 21 ordinates in all and instead of drawing and measuring the mid-ordinates the mean ordinate may be found by first finding the mean of all the ordinates except the last, then the mean of all except the first, and finally the mean of these two means which is the mean required.

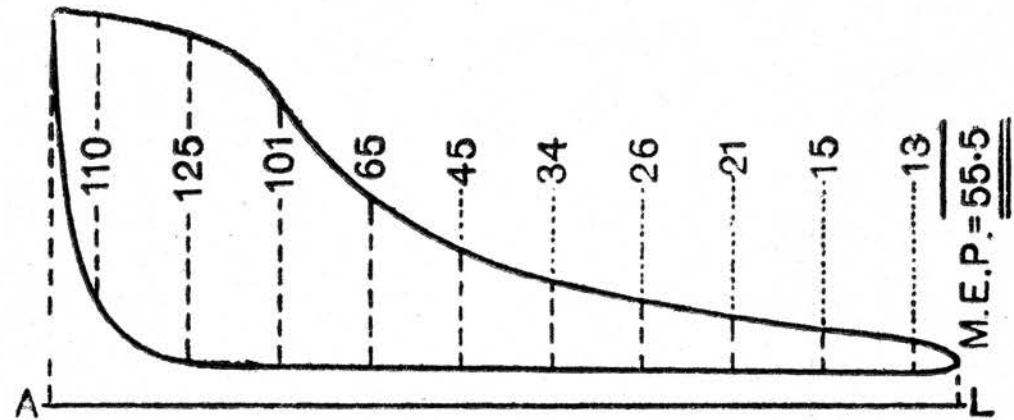


FIG. 336.